



# Wallmount Guide ■ ■ ■ snom 300


1.

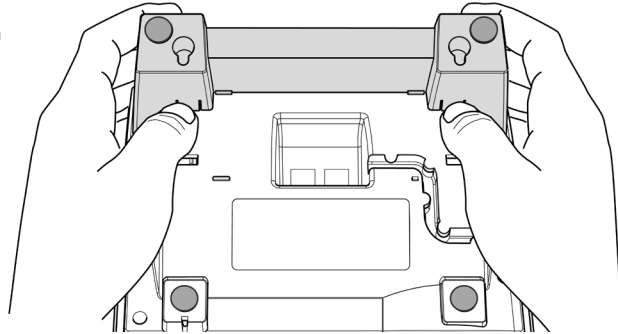


2.

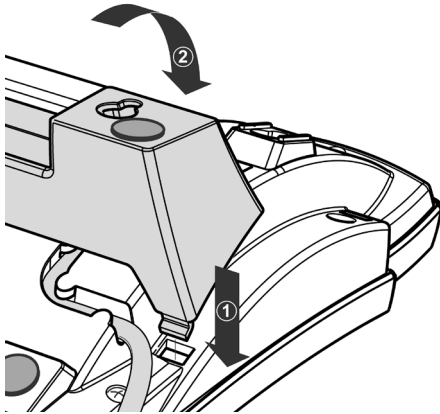



3.

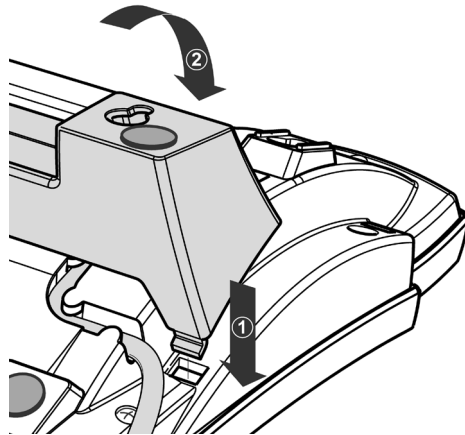


4.

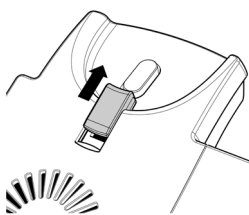


5.

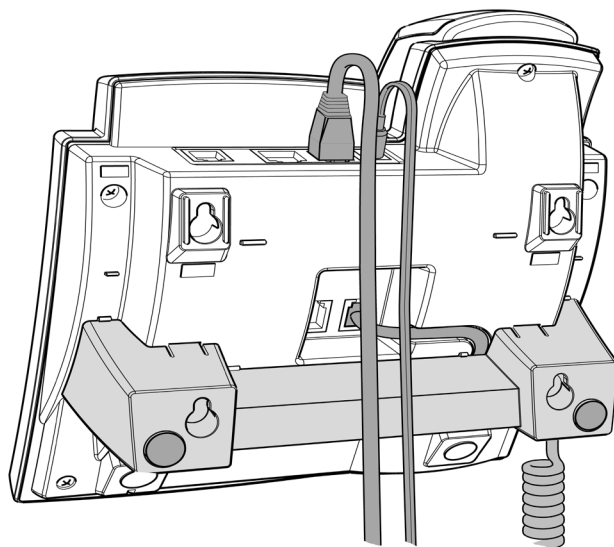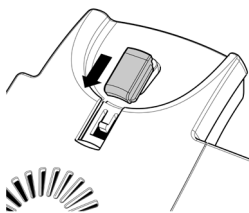

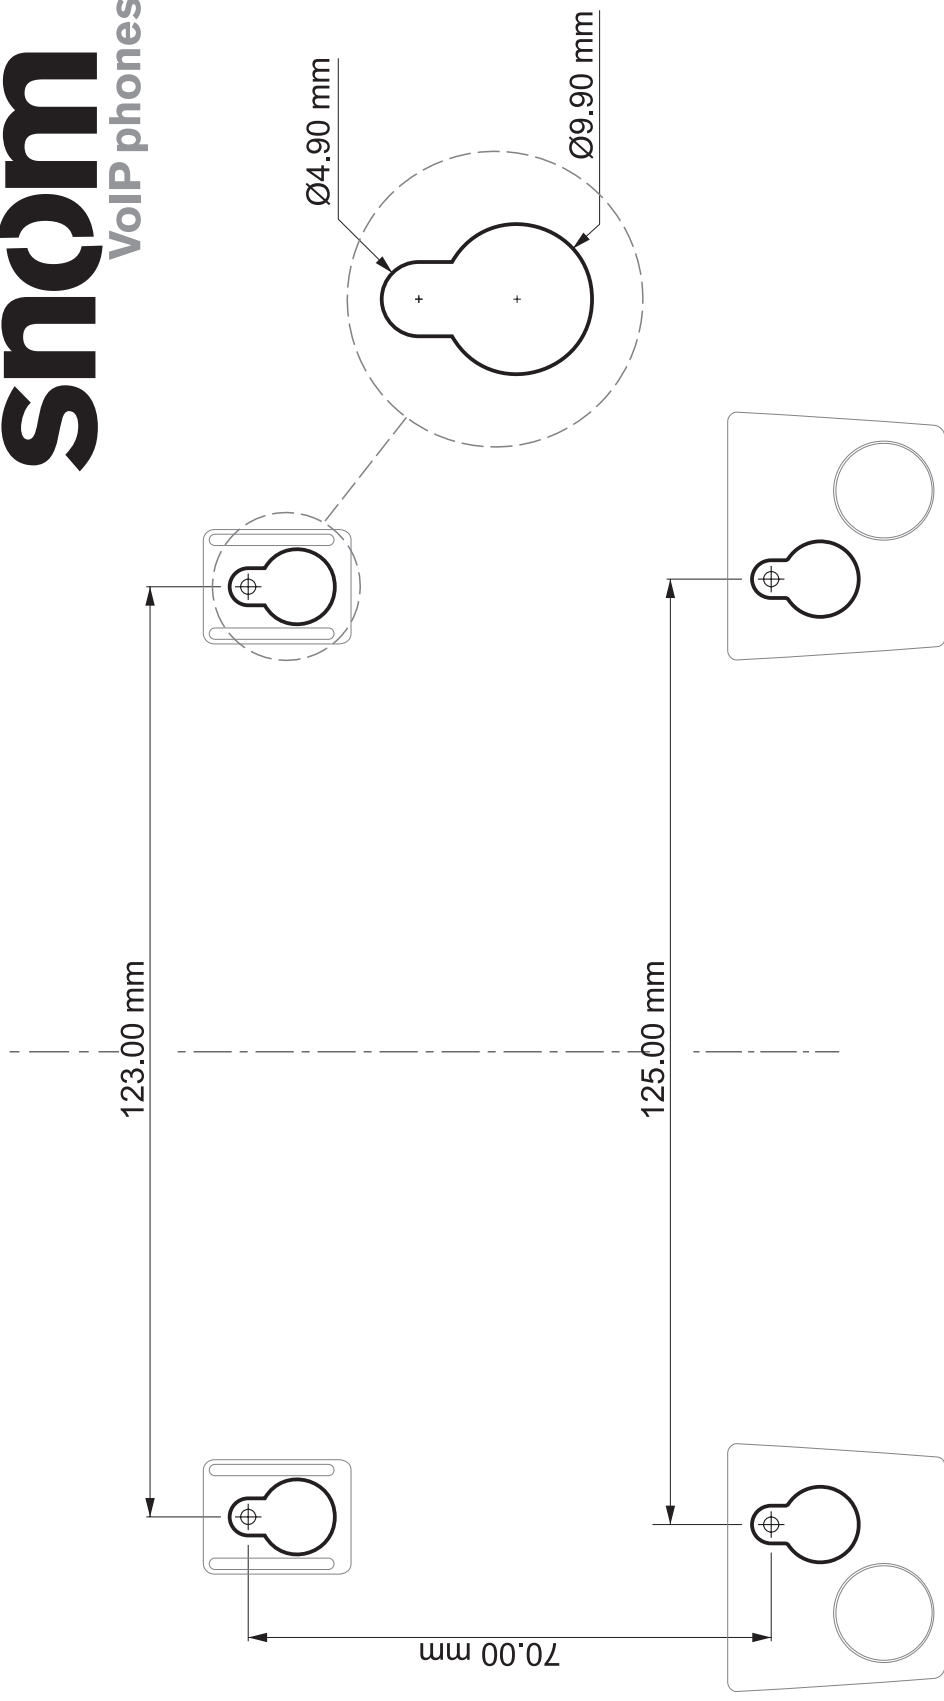


## Drill Template for Wallmount Usage

VoIP - Phone Model  
*snom 300*

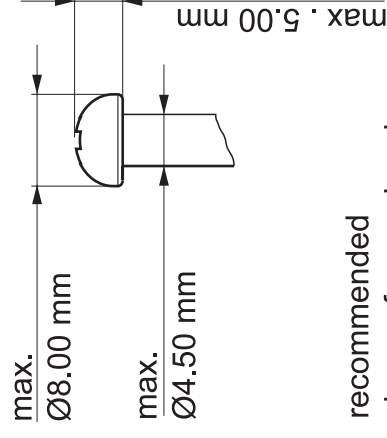

recommended  
shape of screw head

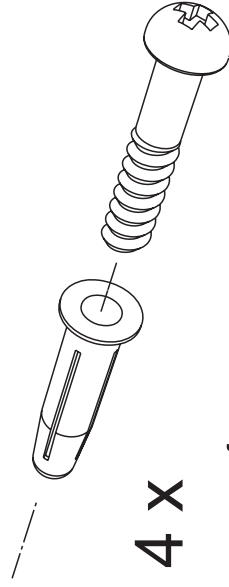

usage of  
woodscrews and dowels recommended  
for brick and concrete walls